

## GB100 Plus Quick Start

### Page 1 : Basic Operation

1

Check Parts List



2


Open the Case

triangular-pry-opener



3

Install SIM Card

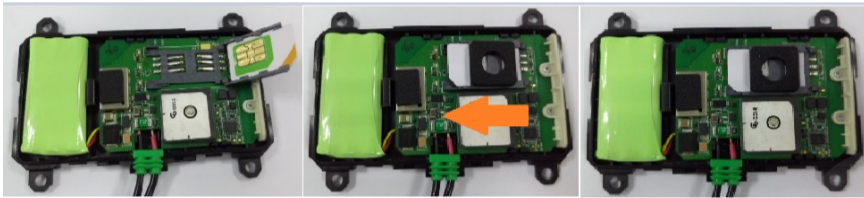

4

Close the case



5

Connect GB100 Plus to vehicle battery. The device will be powered on, and the LED lights will be on.



6

Send the commands via SMS to the device for command configuration.

## Page 2 : Send SMS to Device

1

Set "Report Mode" to "TCP long-connection mode". Send the command as SMS to device SIM number by phone. Please refer to GB100P @Track Air Interface Protocol for details.

```
AT+GTSRI=gb100p,3,,1,XXX.XXX.XX.XX,7037,,0,,30,1,0,0,,,FFFF$
```

Note: XXX.XXX.XX.XX is IP address.

2

Please contact your SIM card provider and get the APN information for GPRS. Input it in GTBSI setting. Send the command via SMS to device SIM number by phone. Please refer to GB100P @Track Air Interface Protocol for details.

```
AT+GTBSI=gb100p,cmnet,,,,,,,,FFFF$
```

3

Set the parameters of fixed time report so that the GB100 Plus will report its position to backend server periodically. Send the command via SMS to device SIM number by phone. Please refer to GB100P @Track Air Interface Protocol for details.

```
AT+GTFRI=gb100p,1,0,0,1,0000,0000,30,30,500,300,,60,120,,,,FFFF$
```

After these steps. GB100 Plus will have some basic tracking functions like fixed time report. For other advanced functions of GB100 Plus, please refer to "GB100P @Tracker Air Interface Protocol" or visit our website.

<http://www.queclink.com>  
[sales@queclink.com](mailto:sales@queclink.com)

Queclink

Grace Wang Checked

2017.09.29