

GV500CG User Manual

GSM/GPRS/LTE Cat1 GNSS Tracker

TRACGV500CGUM001

Version: 1.00



| | |
|----------------------------|---------------------|
| Document Title | GV500CG User Manual |
| Revision | 1.00 |
| Date | 2024-01-19 |
| Status | Release |
| Document Control ID | TRACGV500CGUM001 |

General Notes

Queclink offers this information as a service to its customers, to support application and engineering efforts that use the products designed by Queclink. The information provided is based upon requirements specifically provided to Queclink by the customers. Queclink has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, system validation of this product designed by Queclink within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

Copyright

This document contains proprietary technical information which is the property of Queclink Wireless Solutions Co., Ltd. The copying of this document, distribution to others, and communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights are reserved in the event of a patent grant or registration of a utility model or design. All specifications supplied herein are subject to change without notice at any time.

Contents

| | |
|---|----|
| Contents | 2 |
| Table Index | 3 |
| Figure Index..... | 4 |
| 0. Revision History..... | 5 |
| 1. Introduction | 6 |
| 1.1. Reference | 6 |
| 1.2. Terms and Abbreviations..... | 6 |
| 2. Product Overview..... | 7 |
| 2.1. Appearance | 7 |
| 2.2. Interface Definition | 7 |
| 2.3. LED Description | 8 |
| 2.4. Power Connection | 9 |
| 3. Get Started | 10 |
| 3.1. Parts List | 10 |
| 3.2. Turn on/Turn off..... | 10 |
| 3.3. Open the Case | 10 |
| 3.4. Install a SIM Card..... | 11 |
| 3.5. Close the Case | 11 |
| 3.6. Motion Sensor Direction | 12 |
| 4. Troubleshooting and Safety Information | 13 |
| 4.1. Troubleshooting | 13 |
| 4.2. Safety Information..... | 13 |

Table Index

| | |
|--|----|
| Table 1: GV500CG Protocol Reference | 6 |
| Table 2: Terms and Abbreviations | 6 |
| Table 3: OBD PIN Description..... | 8 |
| Table 4: LED Description | 9 |
| Table 5: Parts List | 10 |
| Table 6: Solutions to Possible Trouble | 13 |

Figure Index

| | |
|---|----|
| Figure 1: Appearance of GV500CG..... | 7 |
| Figure 2: OBD PIN Definition of GV500CG | 7 |
| Figure 3: LED Lights of GV500CG..... | 8 |
| Figure 4: Open the Case | 10 |
| Figure 5: SIM Card Installation..... | 11 |
| Figure 6: Close the Case | 11 |
| Figure 7: Motion Sensor Direction | 12 |

0. Revision History

| Revision | Date | Author | Description of Change |
|----------|------------|----------|-----------------------|
| 1.00 | 2024-01-19 | Eden Cao | Initial. |

1. Introduction

The GV500CG is a compact 4G OBD tracker, integrated LTE Cat1 ensuring a reliable and futureproof network, the competitive minimum size make it possible to be installed on all cars without any abruptness and incompatibility. The product also featured with driver behavior monitoring, crash detection, mileage recording as well as BLE connectivity which is ideal for insurance applications and connected car service.

1.1. Reference

Table 1: GV500CG Protocol Reference

| SN | Document Name | Remark |
|-----|---------------------------------------|--|
| [1] | GV500CG @Track Air Interface Protocol | The air protocol interface between GV500CG and the backend server. |

1.2. Terms and Abbreviations

Table 2: Terms and Abbreviations

| Abbreviation | Description |
|--------------|-----------------------|
| PWR | External Power Supply |
| GND | Ground |
| OBD | On-Board Diagnostics |

2. Product Overview

2.1. Appearance



Figure 1: Appearance of GV500CG

2.2. Interface Definition

GV500CG has an OBD II connector, which is used for device external power supply. The order and definition of the OBD II connector are shown below:



Figure 2: OBD PIN Definition of GV500CG

Table 3: OBD PIN Description

| Index | Item | Description |
|-------|------------|--|
| 1 | SW_CAN | SW_CAN of ISO 11898 and ISO 15765 |
| 2 | J1850_BUS+ | J1850 Bus positive line of J1850 PWM and J1850 VPW |
| 3 | MS_CAN_H | MS_CAN_H line of ISO 11898 and ISO 15765 |
| 4 | GND | Power and digital ground |
| 5 | GND | Power and digital ground |
| 6 | HS_CAN_H | HS_CAN_H line of ISO 11898, J1939 and ISO 15765 |
| 7 | K_Line | K line of ISO 9141, ISO 9141-2 and ISO 14230 |
| 8 | Reserved | |
| 9 | Reserved | |
| 10 | J1850_BUS- | J1850 Bus negative line of J1850 PWM and J1850 VPW |
| 11 | MS_CAN_L | MS_CAN_L line of ISO 11898 and ISO 15765 |
| 12 | Reserved | |
| 13 | Reserved | |
| 14 | HS_CAN_L | HS_CAN_H line of ISO 11898, J1939 and ISO 15765 |
| 15 | L_Line | L line of ISO 9141, ISO 9141-2 and ISO 14230 |
| 16 | PWR | External DC power input, 8-32V |

Note: GV500CG uses only PIN4, PIN5 and PIN16 for power supply, and other functions are not supported.

2.3. LED Description

GV500CG has three status LED lights, which are GNSS LED, CEL LED and PWR LED.



Figure 3: LED Lights of GV500CG

Table 4: LED Description

| LED | Device Status | LED Status |
|------|---|---------------|
| GNSS | GNSS chip is powered off. | OFF |
| | GNSS sends no data or data format error occurs. | Slow flashing |
| | GNSS chip is searching GNSS information. | Fast flashing |
| | GNSS chip has gotten GNSS information. | ON |
| CEL | The device is searching network. | Fast flashing |
| | The device has been registered on the network. | Slow flashing |
| | SIM card needs pin code to unlock. | ON |
| PWR | No external power and internal battery voltage is lower than 3.6V. | OFF |
| | No external power and internal battery voltage is lower than 3.7V. | Slow flashing |
| | The external power supply has been connected to the device and the internal battery of the device is charging. | Fast flashing |
| | The external power supply has been connected to the device and the internal battery of the device is fully charged. | ON |

Note:

1. The three LED lights can be configured to be turned off after a period time by using the configuration tool.
2. Fast flashing: About 100ms ON/ 200ms OFF.
3. Slow flashing: About 200ms ON/ 1000ms OFF.


2.4. Power Connection

PWR(PIN16)/GND(PIN4&PIN5) are the power input pins. The input voltage range for this device is from 8V to 32V. The device is designed to be installed in vehicles that operate on 12V or 24V vehicle without the need for external transformers.

3. Get Started

3.1. Parts List

Table 5: Parts List

| Name | Picture |
|------------------------------------|--|
| GV500CG Locator | <p>50mm*46mm*23mm</p>  |
| USB-MICRO[C&D]-ST CABLE (Optional) |  |

3.2. Turn on/Turn off

- Turn on: Connect the device to external power, and it will be turned on automatically. CEL LED light will be on.
- Turn off: Set <Battery Working Mode> in **AT+GTCFG** to **0** to disable the backup battery, and then disconnect the device from the external power.

3.3. Open the Case

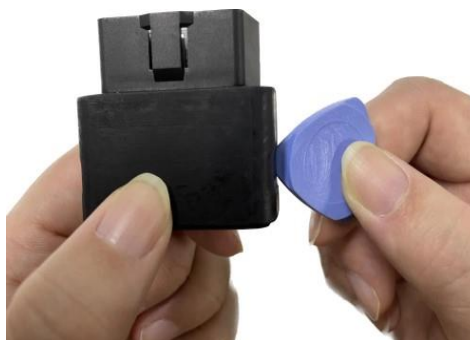


Figure 4: Open the Case

Insert the triangular-pry-opener into the gap of the case as shown in the figure, and push the opener up until the case is unsnapped. The GV500CG device has 2 gaps. When GV500CG is shipped, the case of GV500CG is not closed completely, which allows the user to open it relatively easily for SIM card and battery installation.

3.4. Install a SIM Card



Figure 5: SIM Card Installation

Open the case and ensure the device is not powered. Slide the holder to open the SIM card holder. Insert the SIM card into the holder as shown above with the gold-colored contact area facing down. Take care to align the cut mark. Close the SIM card holder. Close the case.

3.5. Close the Case



Figure 6: Close the Case

Put the upper cover on the lower cover, and press the covers to make sure they are closed completely.

3.6. Motion Sensor Direction

GV500CG has an internal 3-axis accelerometer supporting driving behavior monitoring, crash detection and motion detection. The following figure shows the directions of the motion sensor.



Figure 7: Motion Sensor Direction

Note:

1. The opposite direction of the OBD port is the positive direction of the Y-axis.
2. The long side to the short side of the OBD port is the positive direction of the Z-axis.
3. The positive directions of the three axes are perpendicular to each other, as shown in the figure above.

4. Troubleshooting and Safety Information

4.1. Troubleshooting

Table 6: Solutions to Possible Trouble

| Trouble | Possible Reason | Solution |
|---|---|---|
| After GV500CG is turned on, the CEL LED always flashes quickly. | The signal is too weak, and the device cannot be registered on the network. | Please move the device to places with good GSM coverage. |
| Messages cannot be reported to the backend server. | The IP address or port of the backend server is wrong. | Make sure the IP address for the backend server is an identified address on the Internet. |
| Unable to power off the device. | The device is inserted into the OBD port of the vehicle. | Plug and unplug the device again. |
| The device cannot get successful GNSS fix. | The GNSS signal is weak. | Please move the device to a place with open sky, and it is better to let the top surface (the surface with LED indicator) face the sky. |

4.2. Safety Information

- Please do not disassemble the device by yourself.
- Please do not put the device on overheated or too humid place, and avoid exposure to direct sunlight. Too high temperature will damage the device or even cause battery explosion.
- Please do not use GV500CG on the airplane or near medical equipment.