

GV50CEU Quick Start

Page 1: Basic Operation

1

Check Parts List



The Micro USB Cable is not in the delivery list. Please contact your vendor for it.

2

Open the case



3

Install a SIM Card

Install the battery




4

Close the case




5

Find [Queclink_Driver_AsrV2.0.1.0.zip](#) in develop suit and install the driver. If you have already installed it, please go to Step 6.

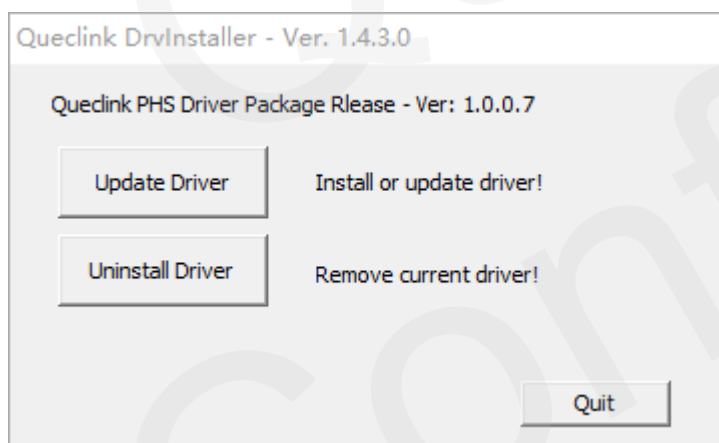


6

Connect GV50CEU to computer by Micro USB Cable.

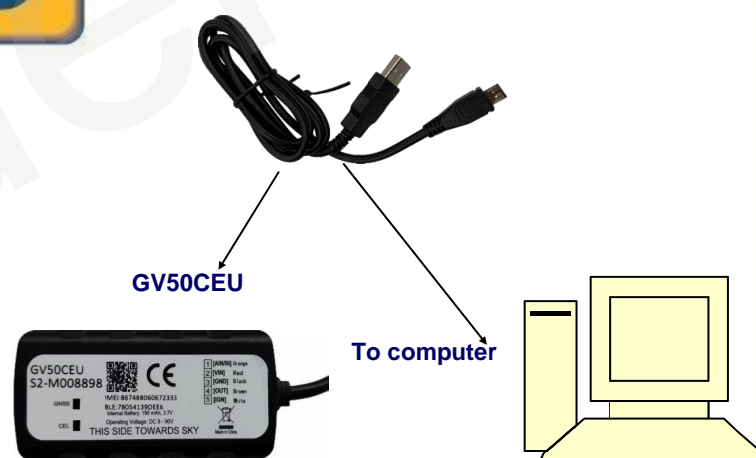

7

Find “[Queclink @Track MT Setup Vx.x.x.exe](#)” in develop suit and run it to configure the running parameters of GV50CEU. Please refer to Page 2 for details.

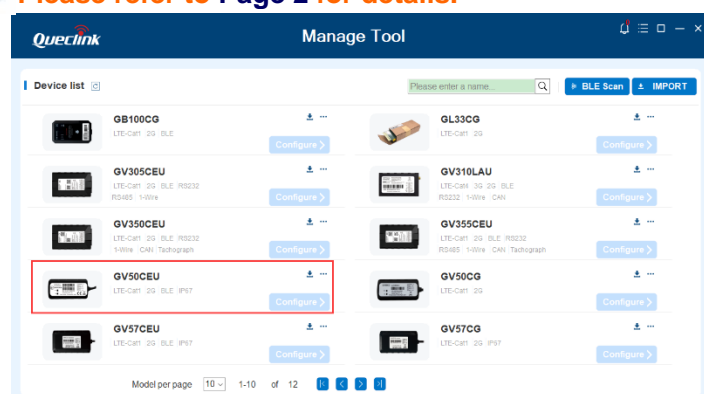

8


Before using GV50CEU for the first time, please fully charge the battery.



Page 2: PC Manage Tool Quick Start


1

After the Tool is installed successfully, please open the Manage Tool and then click **Configure**.

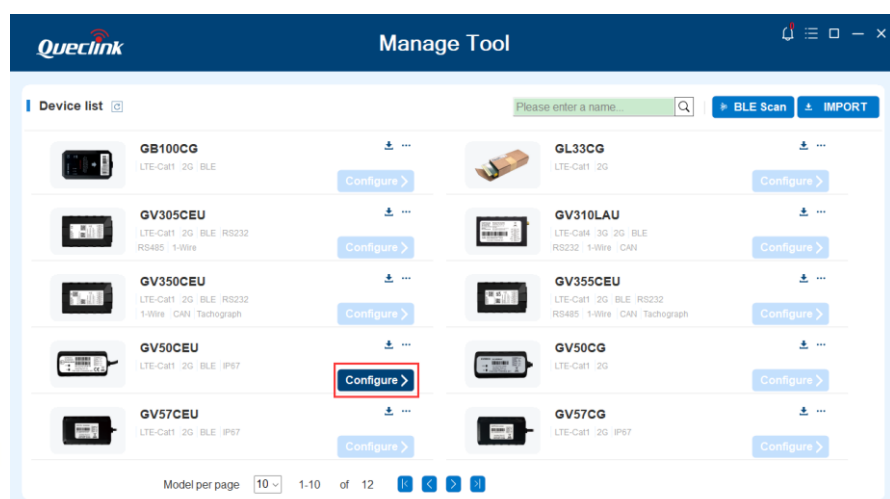


2

If you want to test the GV50CEU by SMS, then set **Report Mode** to **SMS** and input the phone number which you want to receive the SMS from GV50CEU. After that you can go to **Step 6**. Otherwise please go to **Step 3**

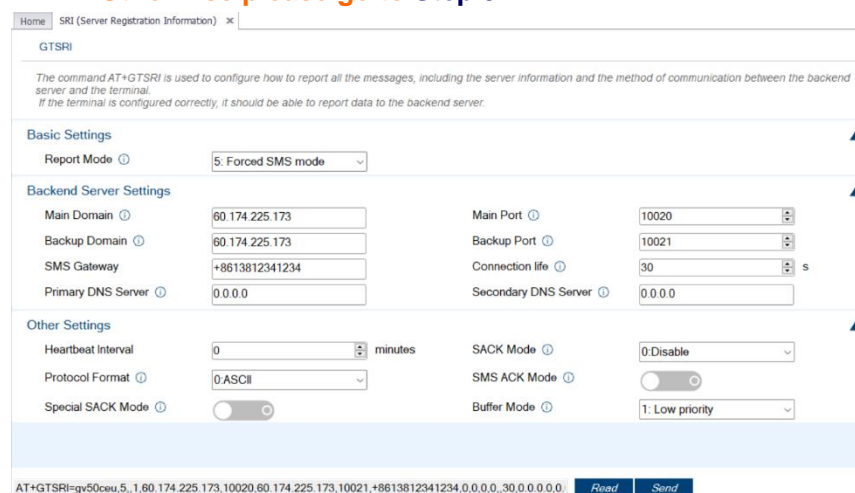


3

Set **Report Mode** to **TCP Short Connection**. Input the IP address and port number of the backend server. Please make sure the IP address can be accessed by internet

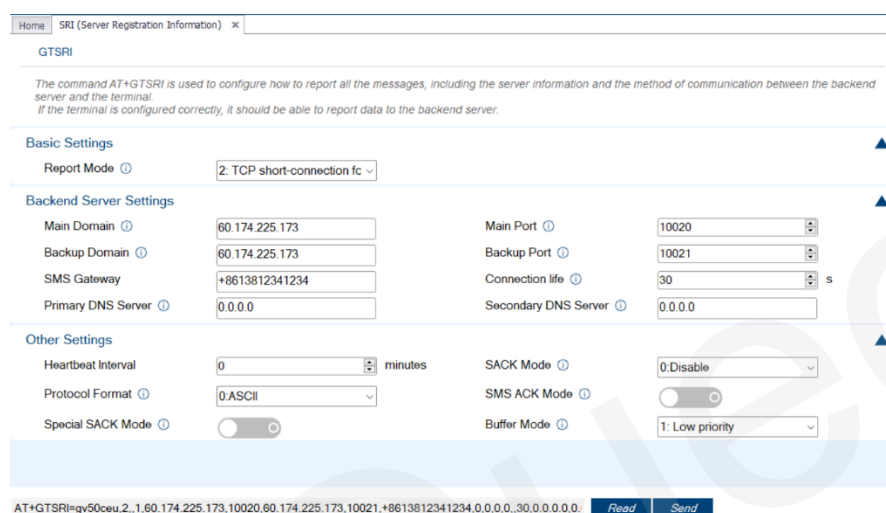

4

Please contact your SIM card provider and get the APN information for GPRS. Input it in **AT+GTBSI** setting.

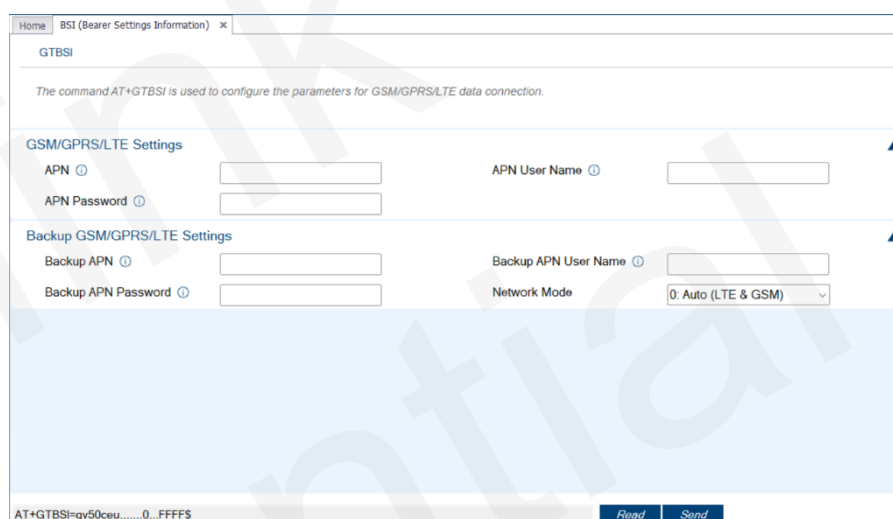

5

Press the **Send** button and update the parameters of GV50CEU. Then GV50CEU can report information to your backend server or SMS receiver. **Note:** These commands can also be sent to GV50CEU by SMS.

AT+GTBSI=gv50ceu,,,,,,0,,,FFFF\$

Command has been accepted when you see the window below.

Queclink @Track MT




Save settings successfully

OK


6

Set the parameters of fixed time report so that GV50CEU will report its position to backend server periodically. Press **Send** button to update the parameters. The following screenshot shows how to configure GV50CEU to report its position every 3 minutes.

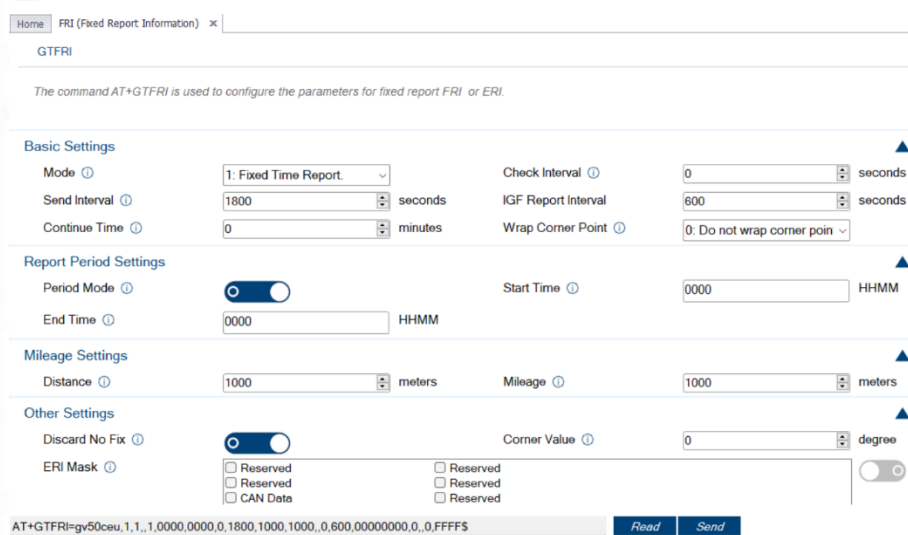

7

The following screenshot shows how to create a Geo-Fence rule. Press **Send** button to update the parameters.

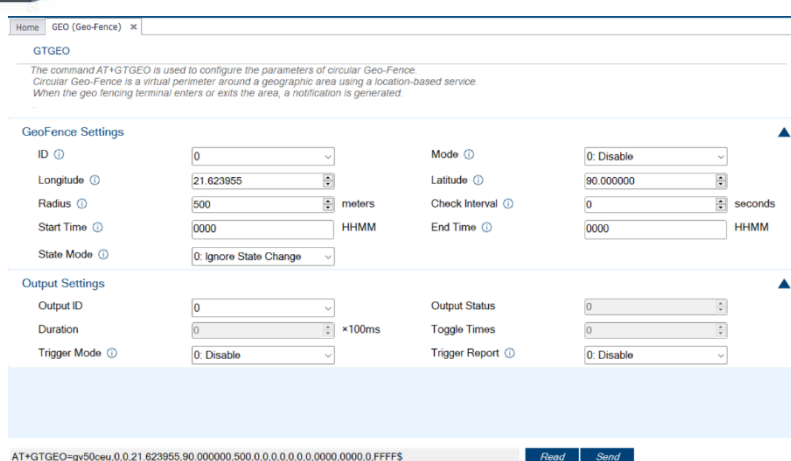

After these steps, GV50CEU will have some basic tracking functions like fixed time report and Geo-Fence. For other advanced functions of GV50CEU, please refer to <http://www.queclink.com> **GV50CEU @Track Air Interface Protocol** or visit our web- site.

<http://www.queclink.com>
sales@queclink.com