

GV57CEU Quick Start

Page 1: Basic Operation

1

Check Parts List



2

Open the case



3

Install a SIM Card

Install the battery




4

Close the case




5

Find **Queclink_Driver_AsrV2.0.1.0.zip** in develop suit and install the driver. If you have already installed it, please go to Step 6.

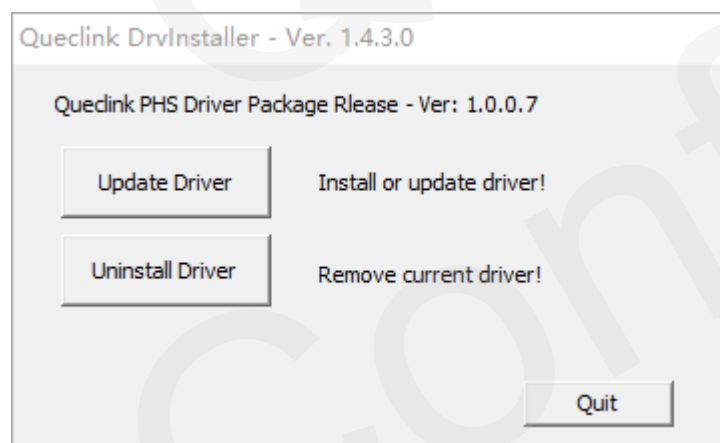


6

Connect GV57CEU to computer by Micro USB Cable.

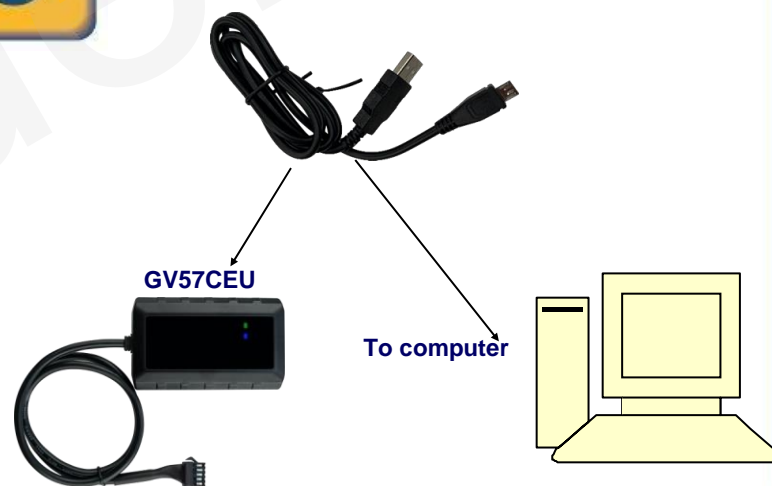

7

Find **Queclink @Track MT Setup Vx.x.xx.exe** in develop suit and run it to configure the running parameters of GV57CEU. Please refer to Page 2 for details.

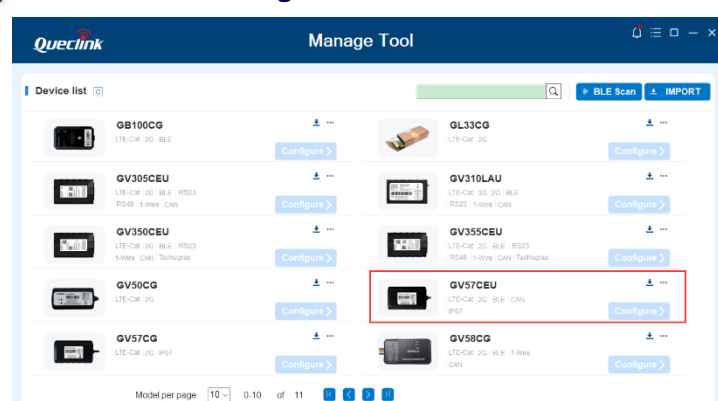

8


Before using GV57CEU for the first time, please fully charge the battery.



Page 2: PC Manage Tool Quick Start


1

After the Tool is installed successfully, please open the Manage Tool and then click **Configure**.

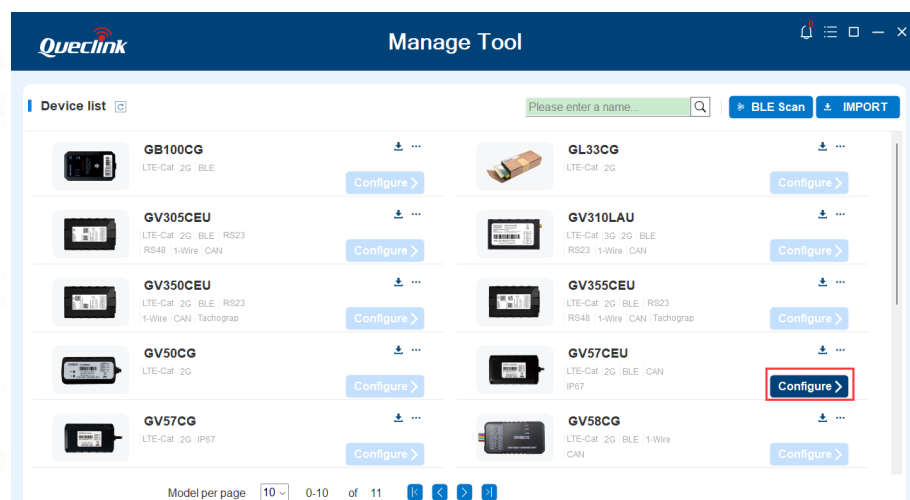


2

If you want to test the GV57CEU by SMS, then set **Report Mode** to **SMS** and input the phone number which you want to receive the SMS from GV57CEU. After that you can go to **Step 6**. Otherwise please go to **Step 3**

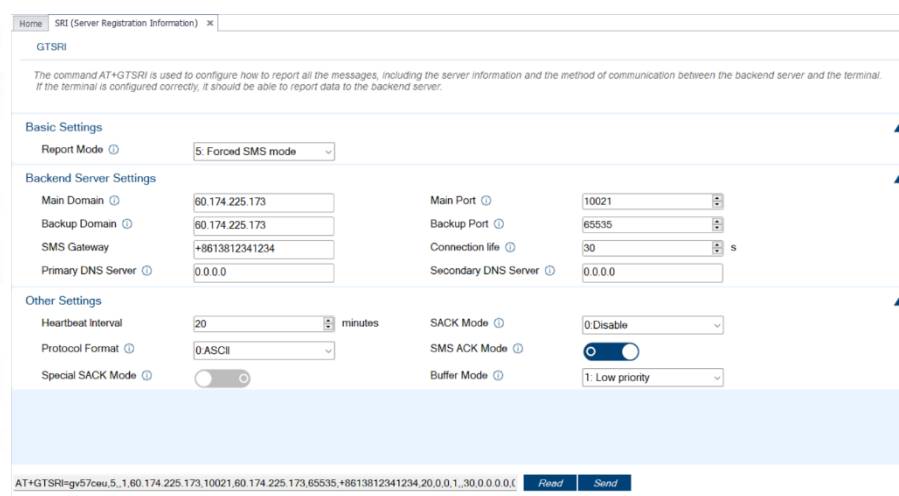


3

Set **Report Mode** to **TCP Short Connection**. Input the IP address and port number of the backend server. Please make sure the IP address can be accessed by internet and the data sent to this address can be received.

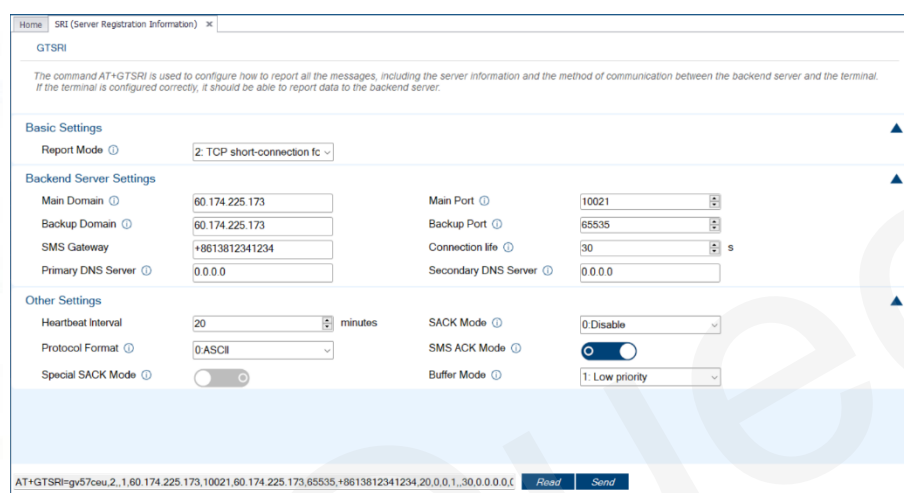

4

Please contact your SIM card provider and get the **APN** information for GPRS. Input it in **AT+GTBSI** setting.

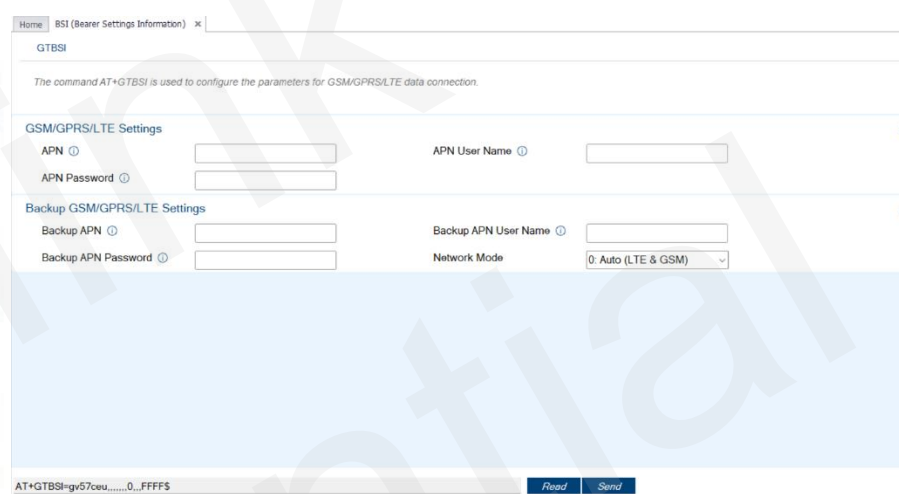

5

Press the **Send** button and update the parameters of **GV57CEU**. Then **GV57CEU** can report information to your backend server or SMS receiver. **Note:** These commands can also be sent to **GV57CEU** by SMS.

AT+GTBSI=gv57ceu,cmnet,,,,,0,,,FFFF\$

Command has been accepted when you see the window below.

Queclink @Track MT




Save settings successfully

OK


6

Set the parameters of fixed time report so that **GV57CEU** will report its position to backend server periodically. Press **Send** button to update the parameters. The following screenshot shows how to configure **GV57CEU** to report its position every 3 minutes.

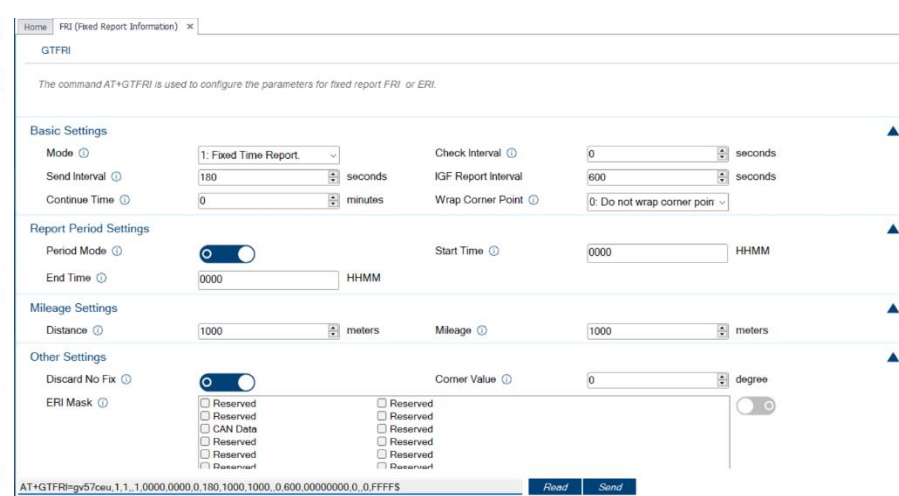

7

The following screenshot shows how to create a **Geo-Fence** rule. Click **Send** button to update the parameters.

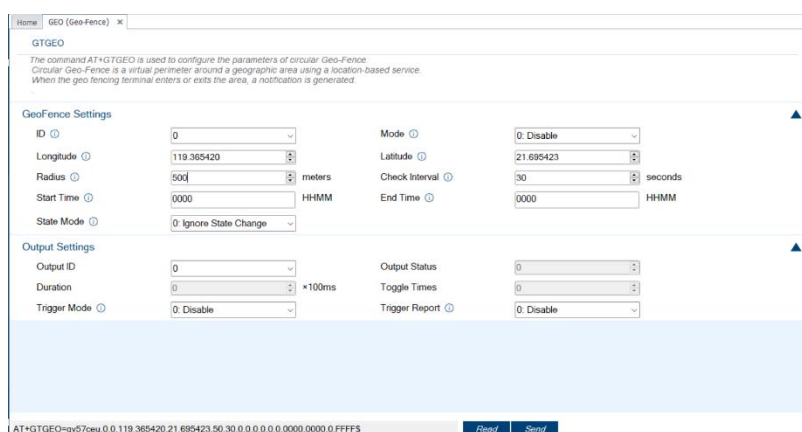

After these steps, **GV57CEU** will have some basic tracking functions like fixed time report and Geo-Fence. For other advanced functions of **GV57CEU**, please refer to **GV57CEU @Track Air Interface Protocol** or visit our website.

<http://www.queclink.com>
sales@queclink.com