

GV305CEU Quick Start

Page 1: Basic Operation

1

Check Parts List



The USB Data_Cable_W is not in the delivery list. Please contact your vendor for it.

2

Open the case

Use ascrewdriver



3

Install a SIM Card

Install the battery




4

Close the case



5

Find **Queclink_Driver_AsrV2.0.1.0.zip** in develop suit and install the driver. If you have already installed it, please go to Step 6.

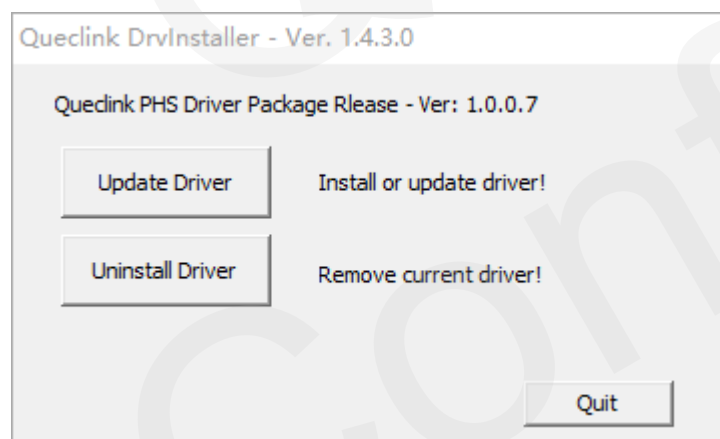


6

Connect GV305CEU to computer by USB Data_Cable_W.




To mini USB

To computer

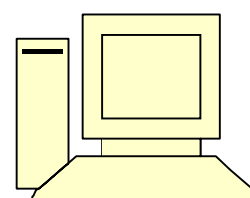

7

Find “**Queclink @Track MT Setup Vx.x.x.exe**” in develop suit and run it to configure the running parameters of GV305CEU. Please refer to “PC Manage Tool Quick Start” for details.

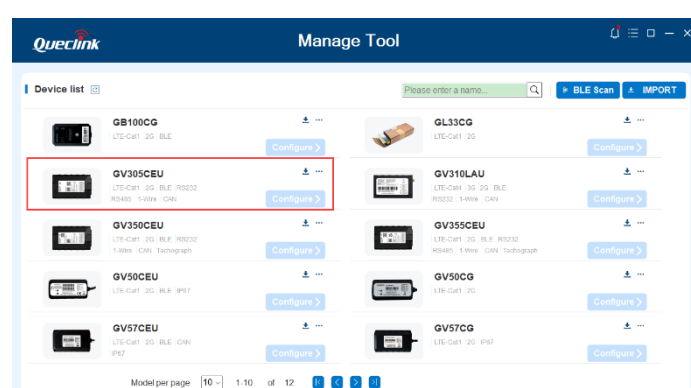

8


Before using GV305CEU for the first time, please fully charge the battery.



Page 2: PC Manage Tool Quick Start


1

If the driver is already installed, MT will recognize it automatically. Then click **Configure**.

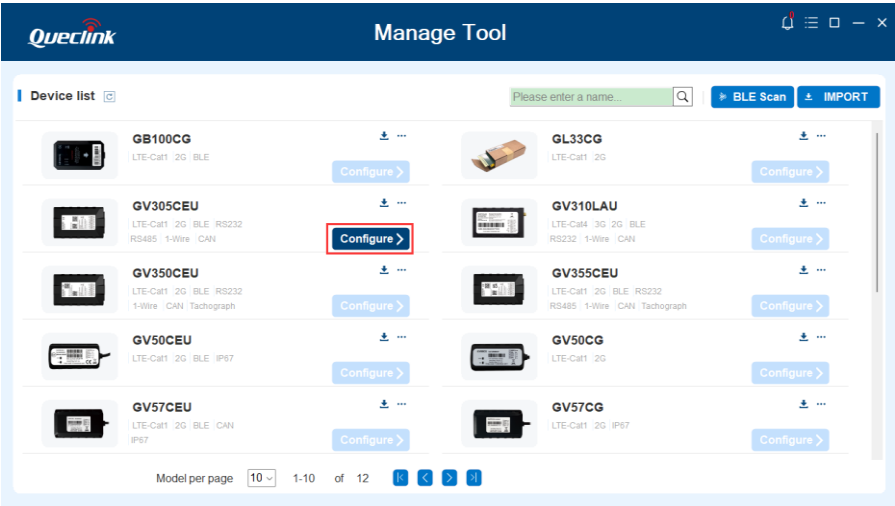


2

If you want to test the GV305CEU by SMS. Then set **“Report Mode”** to **“SMS”** and input the phone number which you want to receive the SMS from GV305CEU. After that you can go to **Step 6**.

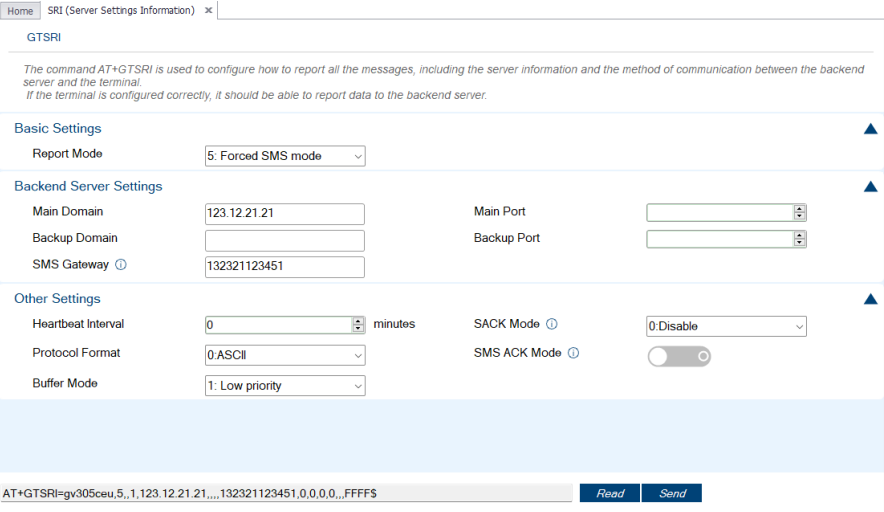


3

Set **“Report Mode”** to **“TCP Short Connection”**. input the IP address and port number of the backend server. Please make sure the IP address can be accessed by internet and

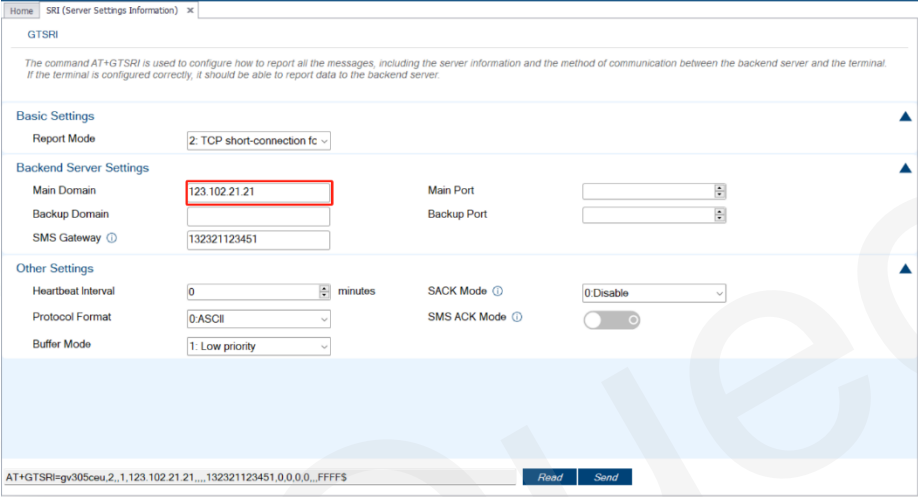

4

Please contact your SIM card provider and get the APN information for GPRS. Input it in AT+GTBSI setting.

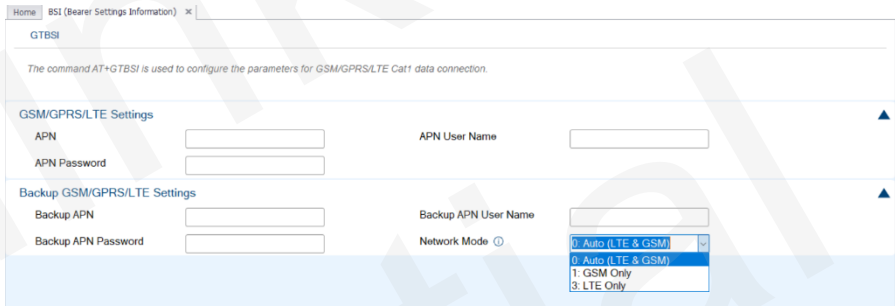


5

Click the **“Send”** button and update the parameters of GV305CEU. Then GV305CEU can report information to your backend server or SMS receiver. **Note:** These commands can also be sent to GV305CEU by SMS.


AT+GTBSI=gv305ceu,cmnet,,,,,0,,,FFFF\$

Command has been accepted when you see the window below.

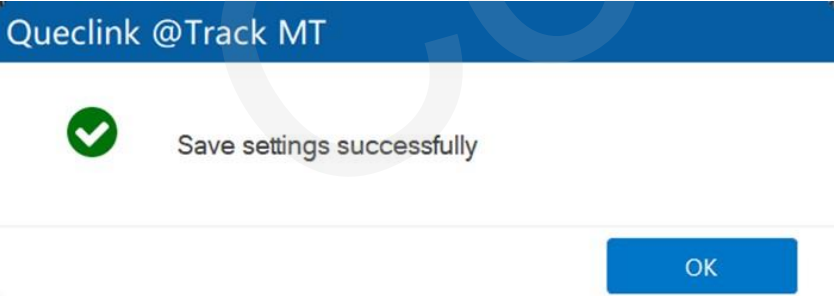


6

Set the parameters of fixed time report so that GV305CEU will report its position to backend server periodically. Click **“Send”** button to update the parameters. The following screenshot shows how to configure GV305CEU to report its position every 3 minutes.

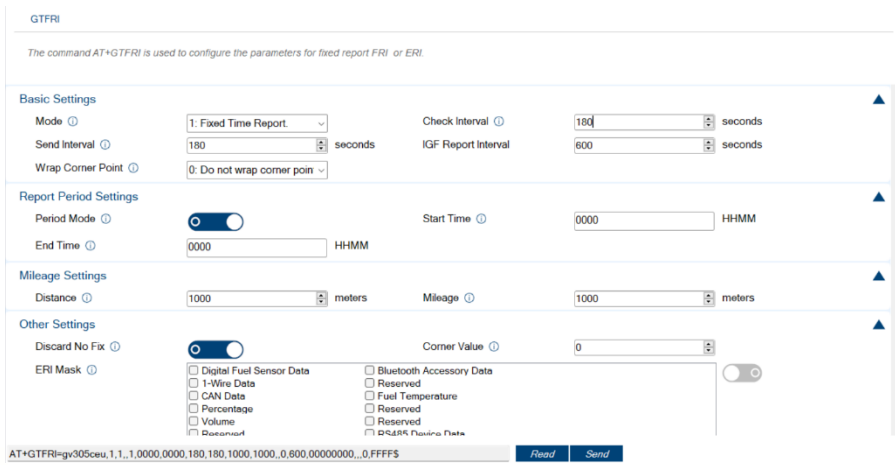

7

The following screenshot shows how to create a Geo-Fence rule. Click **“Send”** button to update the parameters.

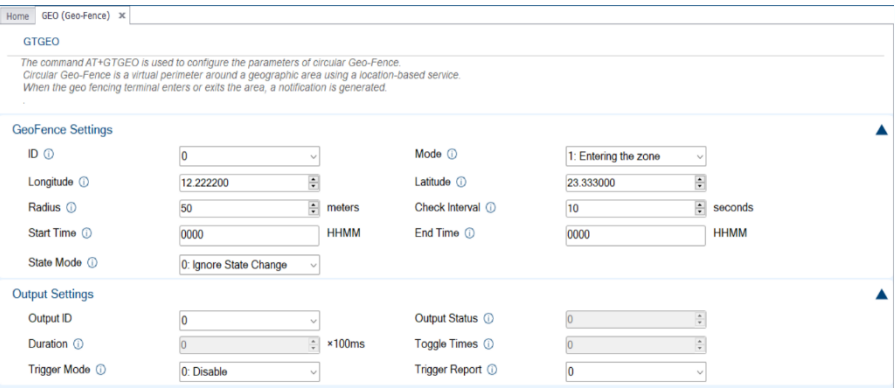

After these steps, GV305CEU will have some basic tracking functions like fixed time report and Geo-Fence. For other advanced functions of GV305CEU, please refer to [GV305CEU @Track Air Interface Protocol](#) or visit our [website](#).

<http://www.queclink.com>
sales@queclink.com